


# SE.3.AN21.00... ELECTRONIC CARDS FORMAT EUROCARD FOR PROPORTIONAL VALVES CONTROL CETOP 3



The electronic cards type SE.3.AN.21.00... have been planned for controlling double solenoid proportional valves of the series XD.3...XDP.3... which do not incorporate the position transducer. The card has a EUROCARD format for being assembled on a connector - type DIN 41612 D 32. The output stage operates on the basis of the Pulse Width Modulation and is subject to the current feedback so that it is possible to obtain an output solenoid current directly proportional to the input signal. The regulator is supplied with standard calibration for proportional valve control. In any case it is possible to optimize the regulations by operating on the relative trimmers placed on the frontal panel (see picture).

- The connection between the card and the solenoid must be direct
- The common one of return to proportional solenoid must not be shared between other valve connections or electrical equipment worker.

<b>SE.3.AN21...</b>	
INSTRUCTIONS	CH. IX PAGE 12
OVERALL DIMENSIONS	CH. IX PAGE 12

 **Registered mark with reference to the electromagnetic compatibility.**  
European norms: EN50082-1 - General safety norm; EN50081-1 - Emission general norm.


### ADJUSTMENT PANEL FOR CARD

<b>Fault</b>	Disable
<b>Power on</b>	yellow – 24V DC power supply
<b>Enable</b>	green – card enable
<b>Gain A</b>	Solenoid A maximum current regulation
<b>Offset A</b>	Solenoid A offset current regulation
<b>Gain B</b>	Solenoid B maximum current regulation
<b>Offset B</b>	Solenoid B offset current regulation
<b>Ramp Up</b>	Ramp up regulation
<b>Ramp Down</b>	Ramp down regulation
<b>Current A</b>	Solenoid A current test point (1V=1A)
<b>Current B</b>	Solenoid B current test point (1V=1A)
<b>Reference</b>	Reference signal test point
<b>Transducer</b>	Disable
<b>Common 0V</b>	Common zero

### ORDERING CODE

<b>SE</b>	Electronic card format EUROCARD DIN 41612
<b>3</b>	NG06
<b>AN21</b>	Analogic
<b>00</b>	Open loop for proportional control valves type XD3.. and XDP3... without transducer
<b>16</b>	Corrente max. al solenoide: 1.76 A
<b>0</b>	No variant
<b>2</b>	Serial No.

### ELECTRICAL CIRCUIT AND CONNECTIONS

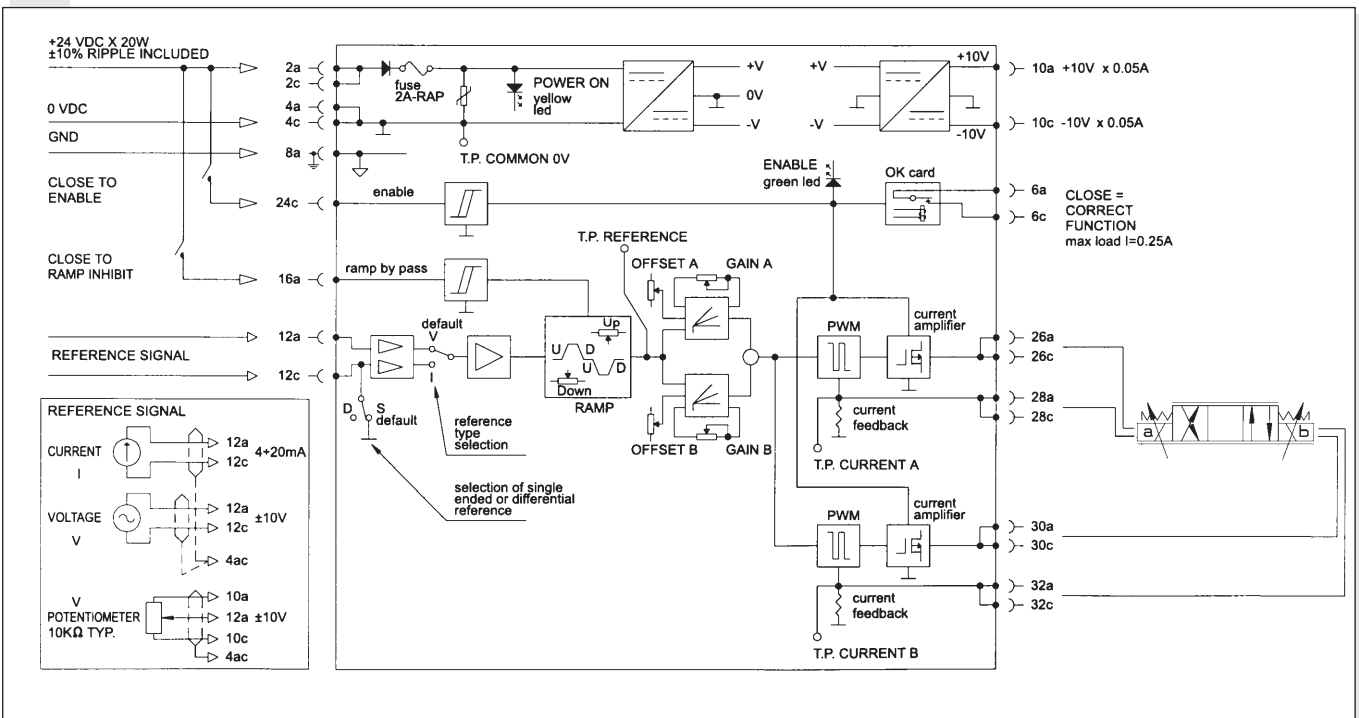

**Instructions for use**

For proportional valves with code

**XD.3.A.\*\*.F.\*\*.2 - XD.3.C.\*\*.F.\*\*.2**  
**XDP.3.A.\*\*.F.\*\*.2 - XDP.3.C.\*\*.F.\*\*.2**

**Power electric supply**

24 VDC nominal  
22÷30 VDC rectified and stabilized (30W max.)  
2A fast-acting fuse is fitted for power circuit protection.

**Reference voltage**

The card gives 1 stabilized voltage values: +10V 50mA (a10) e  
-10V 50mA (c10).

**Available inputs**

± 10V (a12, c12)                    preset  
4 ÷ 20mA (a12, c12)                SW 1 bank:  
select I for current reference  
signal.

**Card enable (Enable)**

Usually the card is not enable. For enabling it, apply in c24 a voltage between 22 and 30VDC. Green led signal.

**Ramp exclusion**

Ramps are usually on. In order to disable them apply a16 a voltage between 22 ÷ 30VDC.

**Calibration procedure**

Connect the card according to the scheme (See the preceding page). Set zero the reference potentiometer. Before applying the voltage, make sure that the hydraulic system does not move suddenly causing damages to people or things. Apply the voltage to the card: the green led will start blinking. Enable the card and disconnect the ramps (led "FAULT" off) and disable the ramps.

**Minimum current regulation**

A channel: put the reference signal on 3÷5% of the max. value. Turn the minimum current trimmer clockwise ( $I_{min}$  A) until the actuator moves; then turn the trimmer counterclockwise until the actuator stops.

B channel: repeat the above procedure for the A channel by operating on the  $I_{min}$  B trimmer for negative values of the reference signal.

**Maximum current regulation**

A channel: put the reference signal on the max. (positive) value and turn the gain trimmer ( $I_{max}$  A) slowly, until the max. speed requested is reached. Now the speed can be varied by changing the reference signal.

B channel: repeat the above procedure for the A channel by operating on the  $I_{max}$  B trimmer and by putting the reference signal on the max. negative value.

**Ramp time calibration**

Connect the ramps. The ramp time is the time which is necessary for going from the minimum current value to the max. current value and vice versa. The time can be set from a minimum value of 0.1 sec. (ramp excluded) up to a maximum value of 10 sec. (valve max. opening) whether downwards or upwards. By turning the trimmers clockwise the ramp time increases

**Notes:**

The ramp down time influences the lock position of the actuator. By setting to zero the reference signal, the actuator keeps moving until the ramp time set (in a downward direction) has passed. For this reason it is necessary to carry out the adjustment carefully and properly.

**Solenoid current test point**

On the frontal card panel: 1V = 1A

**Command signal test point**

Enables reading in voltage of referencesignal sent to the card. Reading is direct, but of opposite sign, with voltage reference while current conversation is: 4mA = +10V, 20mA = -10V.

**OVERALL DIMENSIONS**

